



Automatic Multi-Satellite TV Antenna

LNB Replacement Instructions

**Models RP-SK01, RP-SK05, RP-SK09,
RP-SK73, RPSK01H**

For help, email help@winegard.com
or call 1-800-788-4417
www.winegard.com/mobile

**NOTE: RPSK01H LNB Replacement is only
compatible with SK-1000 built after 1/1/2018.**

2452261
Rev2 9/18

RAISING THE ANTENNA

1. Press and hold “POWER” for two seconds to turn on the interface box. Wait until the interface box finishes “connecting to antenna.” The TRAV’LER® antenna may enter the search routine after ten seconds.

Pay attention to the pinch points as the antenna raises!


2. Wait until the antenna has at least raised to a position in which the feed arm is parallel to the roof. Then, press “POWER” and “SELECT” at the same time. The antenna should stop moving.
3. Unplug the interface box. Continue with instructions for your model of replacement LNB.

RP-SK01 DISH® 1000 / RPSK01H HYBRID LNB REPLACEMENT

1. Remove and set aside the two screws from the wider end of the underside of the integrated adapter.

2. Carefully slide the LNB out from the integrated adapter. Disconnect the three cables from the LNB using a $\frac{7}{16}$ ” wrench.

3. **RP-SK01-** Connect the three cables running through the integrated adapter to ports 1–3 (in any order) on the replacement LNB. Tighten each cable until fingertight, and then use a $\frac{7}{16}$ ” wrench to tighten a quarter turn more.

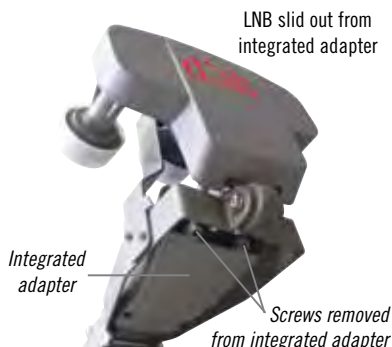

RPSK01H – Using the supplied dual coax cable, connect the ends with red heat shrink wrapping to Port 1 on LNB and Port C on TRAV’LER turret. Connect the black coax cables to Port 2 on LNB and Port A on TRAV’LER turret.


THE HOPPER 3 AND ALL COMPONENTS MUST CONNECT TO PORT C ON TRAV’LER BASE. PORT A AND B WILL NOT BE USED FOR REGULAR CONFIGURATIONS.

Tighten each cable until fingertight, and then use a $\frac{7}{16}$ ” wrench to tighten a quarter turn more.

4. Slide the LNB into the integrated adapter, and re-install the two screws (removed earlier) through the integrated adapter and LNB.

RP-SK05 DIRECTV® SLIMLINE LNB REPLACEMENT


1. Remove and set aside the four nuts and bolts holding the LNB guard to the feed arm. Then, slide the LNB guard down the feed arm and toward the reflector.
2. Remove and set aside the two screws holding the LNB to the feed arm.
3. Carefully slide the LNB out from the feed arm. Disconnect the four coax cables from the LNB using a $\frac{7}{16}$ " wrench.

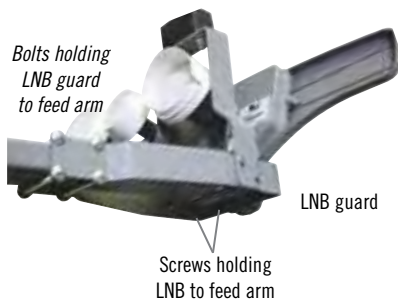

4. Connect the four coax cables running through the feed arm to the replacement LNB. The coax cables can be connected in any order. Tighten the cables until fingertight, and then use a $\frac{7}{16}$ " wrench to tighten a quarter turn more.
5. Slide the LNB into the feed arm, and re-install the two screws (removed earlier) through the underside of the feed arm and replacement LNB. Tighten.
6. Slide the LNB guard up the feed arm and over the LNB. The front of the LNB guard should be $\sim\frac{1}{2}$ " in front of the LNB and should not be touching the LNB. Install the four bolts through the four holes in the LNB guard. Thread a nut onto each bolt, and tighten.

RP-SK09 DIRECTV® SWM SLIMLINE LNB REPLACEMENT

1. Remove and set aside the four nuts and bolts holding the LNB guard to the feed arm. Then, slide the LNB guard down the feed arm and toward the reflector.
2. Remove and set aside the two screws holding the LNB to the feed arm.
3. Carefully slide the LNB out from the feed arm. Disconnect the coax cable from the LNB using a $\frac{7}{16}$ " wrench.

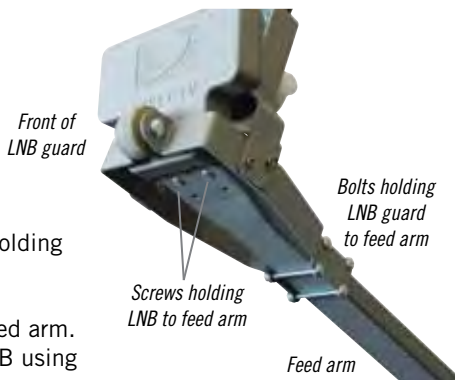


4. Connect the coax cable running through the feed arm to the replacement LNB. Tighten the cable until fingertight, and then use a $\frac{7}{16}$ " wrench to tighten a quarter turn more.
5. Slide the LNB into the feed arm, and re-install the two screws (removed earlier) through the underside of the feed arm and replacement LNB. Tighten.

6. Slide the LNB guard up the feed arm and over the LNB. The front of the LNB guard should be $\sim\frac{1}{2}$ " in front of the LNB and should not be touching the LNB. Install the four bolts through the four holes in the LNB guard. Thread a nut onto each bolt, and tighten.

RP-SK73 SHAW DIRECT LNB REPLACEMENT

1. Remove and set aside the four nuts and bolts holding the LNB guard to the feed arm. Then, remove the LNB guard from the feed arm.
2. Remove and set aside the screw holding the LNB to the feed arm.
3. Disconnect the four coax cables from the LNB using a $\frac{7}{16}$ " wrench, and carefully remove the LNB from the feed arm.
4. Connect the four cables running through the feed arm to the four ports on the replacement LNB. The cables can be connected in any order. Tighten each cable until fingertight, and then use a $\frac{7}{16}$ " wrench to tighten a quarter turn more.
5. Slide the LNB into the feed arm, and re-install the screw (removed earlier) through the underside of the feed arm and replacement LNB. Tighten.
6. Slide the LNB guard onto the feed arm and over the LNB. The front of the LNB guard should be $\sim\frac{1}{2}$ " in front of the LNB.
7. Install the four bolts through the four holes in the LNB guard. Thread a nut onto each bolt, and tighten.

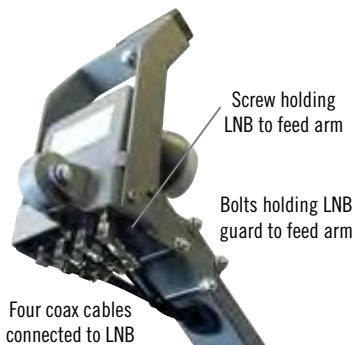

STOWING THE ANTENNA

1. Plug in the interface box.
2. Press and hold "POWER" for two seconds to turn on the interface box. Then, press the Power button again to stow the antenna.

Disclaimer: Although every effort has been made to ensure that the information in this manual is correct and complete, no company shall be held liable for any errors or omissions in this manual. Information provided in this manual was accurate at time of printing.

DISH is a registered trademark of DISH Network L.L.C. DIRECTV is a trademark of AT&T Intellectual Property and/or AT&T affiliated companies. Shaw Direct is a trademark of Shaw Satellite G.P. TRAVLER, and Winegard are registered trademarks of Winegard Company.

Winegard Company • 3000 Kirkwood St. • Burlington, IA 52601-2000
1-800/788-4417 • FAX 319/754-0787 • www.winegard.com • Printed in U.S.A. • ©2012 Winegard Co

Rev2 9/18 2452261